


Installation Instructions for 030.806

For Austin Healey Sprites and MG Midgets

POSITIVE EARTH

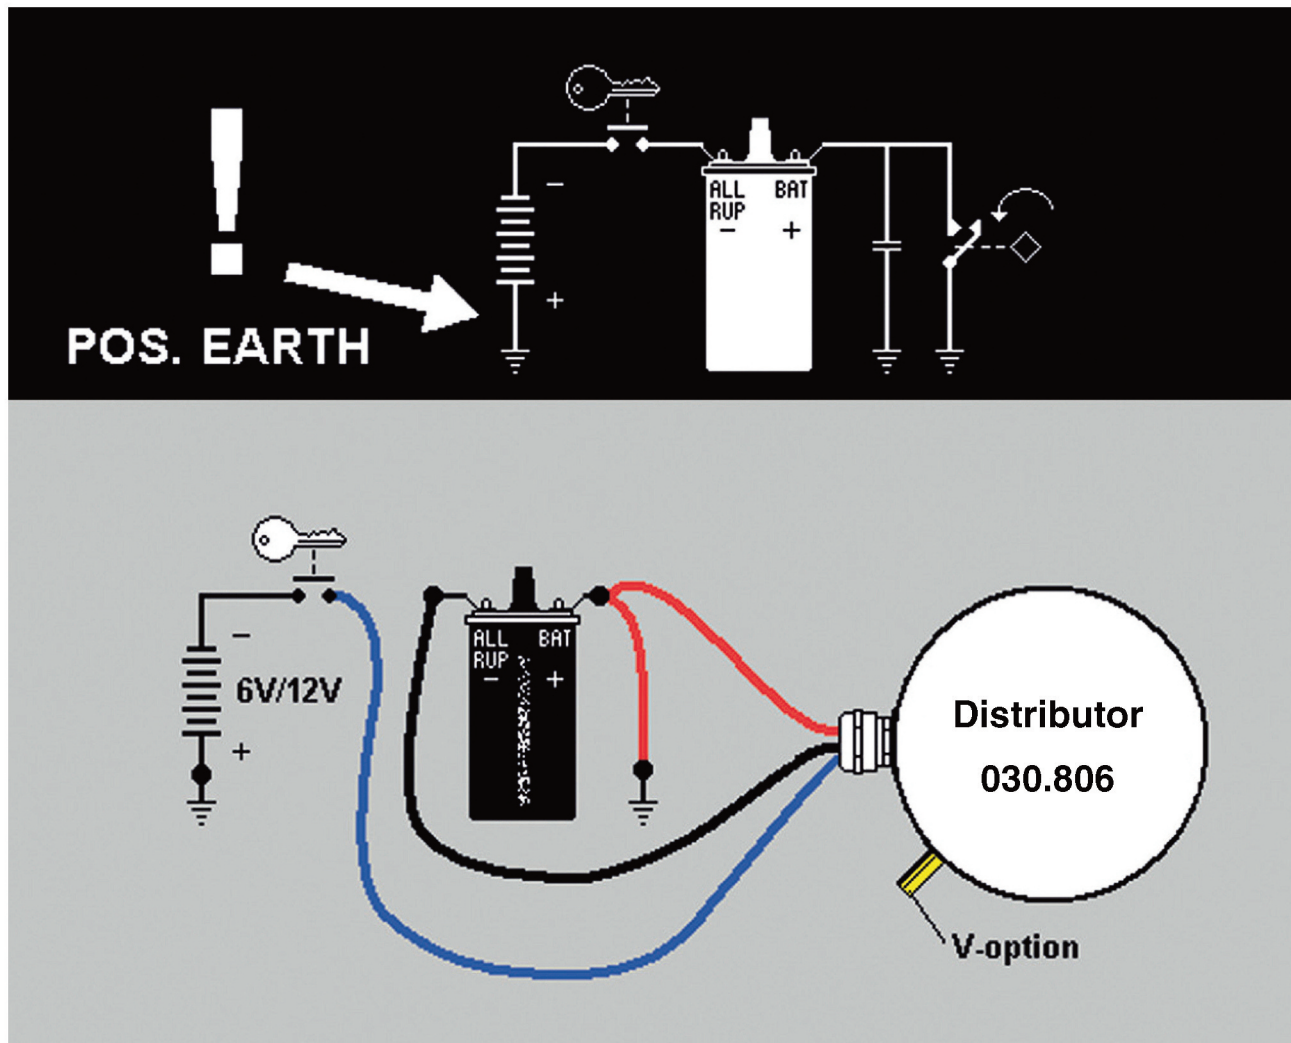

IMPORTANT

Please read the entire instructions before you begin installation. If after reading you are unsure of the procedure to be followed, please ask someone knowledgeable in engine tuning.

Remember to work safely.

STEP 1: Find the static timing point

On the old distributor, note the position of the ignition wire to the number one cylinder. Remove the distributor cap and turn the engine in its normal direction so that the rotor almost points to the number one cylinder position.

Now carefully turn the engine further until the Top Dead Center (TDC) is indicated on the timing mark. The engine is now at the **static timing point**, at the end of the compression stroke for the number one cylinder. If you do know the engine firing order, this is an ideal time to trace the ignition wires and make some notes.

STEP 2: Out with the old, in with the new

You should verify that the correct advance curve for your engine has been selected in your '123' using an 8mm Allen wrench remove the hexagonal plug in the bottom face of the housing. Inside the hole you will find a 16 position rotary switch. (marked '0' to 'F')



curve selector '0' to 'F'
sel. de courbe d'avance '0' à 'F'
Kurve-schalter '0' bis 'F'
Curve-schakelaar '0' tot 'F'

Check the technical data below for the proper setting. Select the curve of your choice, then re-insert the plug and tighten securely.

Now remove the spark plug wires and coil wire from the old distributor-cap and remove the old cap. Disconnect the points wire from the coil. Loosen the clamp at the base of the distributor and pull the old unit out.

Now remove the distributor-cap from the '123' and carefully insert it in the block, turning the rotor until the drive dog mates and the unit slips into place. Rotate the housing of the '123' so that the cables come out conveniently.

If necessary, the drive dog can be repositioned on the shaft to accommodate a different rotational position. To do this, remove the '123' and carefully remove the retaining spring from the drive dog, then use a small punch to tap out the pin and re-assemble at an angle more suitable to your needs.

STEP 3: Static timing the '123'

Connect the red wire to the BAT (positive) terminal of the ignition coil, according to the schematic. For now, do NOT connect the black wire. Turn on the ignition. Slowly turn the housing of the '123' in a clockwise direction until the green LED just lights up.

The LED shines through one of the four holes in the aluminum disc below the rotor. While turning, also press the rotor in a clockwise direction, to remove any free play in the drive. Finally, tighten the '123' securely, as it is also the electrical ground of the '123'. Turn off the ignition.

STEP 4: Finish the wiring

Connect the black wire to the negative terminal of the ignition coil, according to the schematic.

Connect the spark plug leads in the proper sequence to the cap, starting with the wire for the number one cylinder at the position pointed to by the rotor of the '123'.

Also connect the high voltage wire from the coil to the center position of the cap. Attach the cap to the distributor. Route the red and black wire well away from the high voltage leads and away from moving parts, using tie-wraps or other suitable means. Connect the vacuum-tube from the carburetor to the vacuum port on the '123'. Older engines may have a screw-connection for the vacuum-advance diaphragm. In this case you can use a short length of rubber hose to connect to the 123, or remove the hard line to the carburetor and replace it completely with rubber vacuum-hose.

STEP 5: Start and test drive

You can now start your engine. If you have worked accurately, your ignition should be adjusted well enough for a test drive. To achieve ultimate accuracy a fine adjustment using a stroboscope should be performed. (check the dynamic timing data in 'technical data')

Disconnect the vacuum-tube whilst fine-tuning. Enjoy your 123ignition!

TIPS

Do NOT disconnect ANY electric wire, when the engine is running. This is bad practice when using high-tech electronic systems, such as the 123ignition.

Sparks are much stronger with a 123ignition : use good quality sparkplug leads, and a good quality coil. The primary resistance should **not** be lower then 1 ohm !

Resistor-core silicone ignition-leads are the better choice! Do not use solid core wire, these send out quite a lot of electromagnetic noise that interfere with electronic devices.

Mistrust old coils : they all look alike, but you can't see if they have been overheated many times! Buy a new one, now you know that this will not be overheated anymore...

Fresh spark plugs to go with the new coil and wires will ensure optimum ignition performance.

Replace the cap and rotor every 30.000 km. Here is ordering information :

Bosch cap ref. nrs. : 1.235.522.050 / 1.235.522.058 / 1.235.522.059 / 1.235.522.145

Bosch rotor ref. nr. : 1.234.332.024

Technical data

curve	advance starts [degr.crankshaft]	max. advance [rpm/degr.crankshaft]	vac.adv. starts [mmHg]	vac.adv. ends [mmHg/degr.]	replaces	remark
0	1000	5000 / 18,0	150	350/14,0	LUCAS 41404,41030,41419	2000 / 4,5
1	1000	5000 / 18,0	150	350/14,0	LUCAS	2000 / 6,7
2	1000	5000 / 18,0	150	350/14,0	LUCAS 41214,42535,41257	2000 / 8,4
3	1000	5000 / 18,0	150	350/14,0	LUCAS 40774	2000 / 10,2
4	1000	5000 / 20,0	150	350/14,0	LUCAS 40931,41410,41892,42626,42635	2000 / 6,3
5	1000	5000 / 20,0	150	350/14,0	LUCAS 41412,41570	2000 / 7,6
6	1000	5000 / 20,0	150	350/14,0	LUCAS 42681	2000 / 9,4
7	1000	5000 / 20,0	150	350/14,0	LUCAS 42628	2000 / 11,1
8	1000	5000 / 22,0	150	350/14,0	LUCAS 41418	2000 / 6,2
9	1000	5000 / 22,0	150	350/14,0	LUCAS	2000 / 8,1
A	1000	5000 / 22,0	150	350/14,0	LUCAS 41417,41045,41134,41242,41251	2000 / 10,3
B	1000	5000 / 22,0	150	350/14,0	LUCAS 40979,41057,41212,41246,41411	2000 / 12,9
C	1000	5000 / 24,0	150	350/14,0	LUCAS 40767,40819,40899,41007,41250	2000 / 7,0
D	1000	5000 / 24,0	150	350/14,0	LUCAS 41255,41938	2000 / 10,4
E	1000	5000 / 24,0	150	350/14,0	LUCAS 41033,41026	2000 / 12,1
F	1000	5000 / 24,0	150	350/14,0	LUCAS 40768,40873,40941,41249,41569	2000 / 13,9

H O L D E N V I N T A G E & C L A S S I C